



## PROTECT YOUR ENVIRONMENT ALL DAY, EVERYDAY

The CASPR Mobile reduces harmful viruses, including SARS-CoV-2, and bacteria from the air and surfaces. Using a proprietary catalytic process, CASPR's technology has been proven in laboratory testing to be highly effective at reducing pathogens by up to 99.96%.

CASPR, which stands for Continuous Air & Surface Pathogen Reduction, offers no touch, enhanced disinfection for every surface in your dental office, every minute of the day. CASPR Mobile is not an air filter. It reacts with H<sub>2</sub>O molecules in the air to deliver highly effective oxidizing molecules, including Hydrogen Peroxide, at safe levels, to all surfaces, removing pathogens that ordinary cleaning methods can miss.

CASPR Mobile can effectively treat a 1,500 sq. foot area. It is not harmful to humans, pets or plants and is completely safe for use in occupied space.



# EFFECTIVE AGAINST A MULTITUDE OF VIRUSES

“CASPR’s Natural Catalytic Converter was tested against SARS-CoV2 and was found to inactivate 93% of the exposed viruses within 150 minutes.”

- *University of Wisconsin School of Medicine and Public Health*

## BENEFITS



up to 99.9% kill rate of viruses on surfaces







effective against bacteria, viruses and mold



easy Installation.  
plug and play operation



safe, discreet and silent

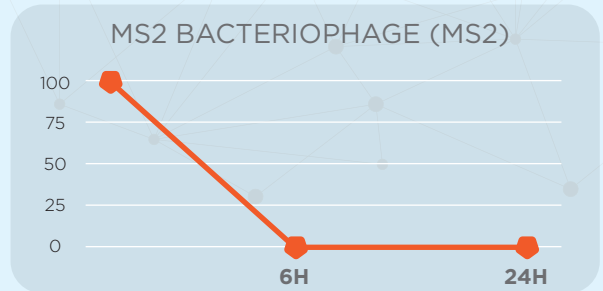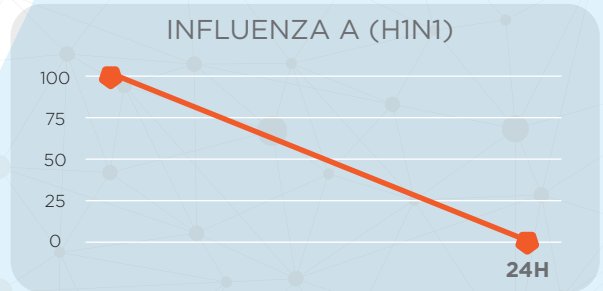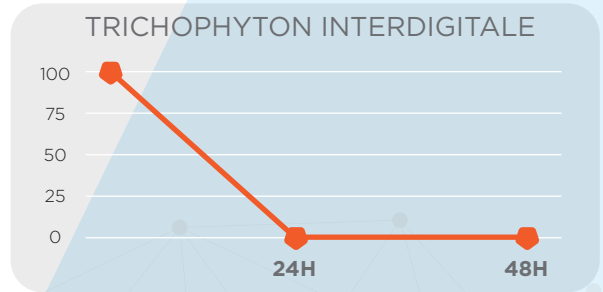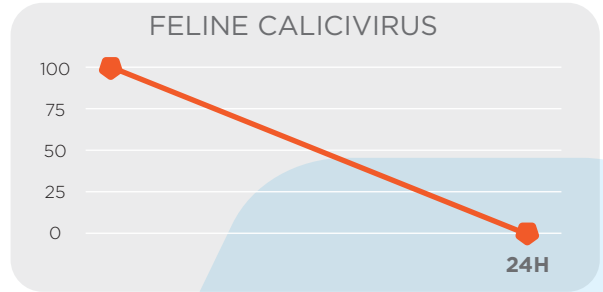

\*

Testing results indicate that CASPR materially reduces or eliminates microorganisms on surfaces in a controlled environment. Results showed Bacteria was reduced over 99.998%, Fungi was reduced over 95%, Methicillin Resistant Staphylococcus (MRSA) was reduced over 99.98%, Influenza A (H1N1) was reduced over 99.93%, and MS2 (virus) was reduced over 99.993%, on surfaces during the testing.

## SPECIFICATIONS

electrical	120/220 VAC, 50/60 HZ 70 watts
mechanical	adjustable fan 460 cfm
dimensions	12”H x 9”W x 9”D
weight	16 pounds
max temp	150° F

\*Testing performed by Microchem Laboratory using ASTM E1153 Testing Methods

\*\*These products are not intended to diagnose, treat, or cure any disease.



© 2C MedTech. CASPR is a trademark of CASPR Group.

www.2cMedTech.com | 214 530-9018